HOME
DECORATORS
C O L L E C T I O N

HDC# 16708 MFG# TW-19439AB / TW-19439AC
KENDALL LINEN CABINET 67.5"Hx28"W

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

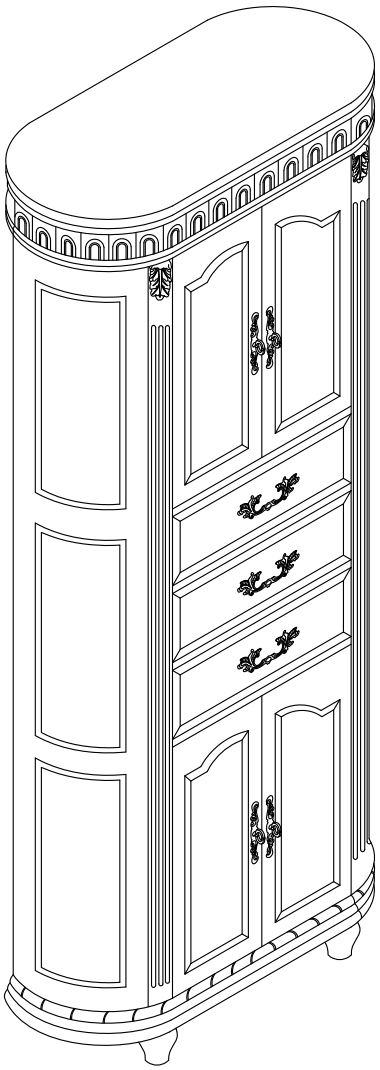

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

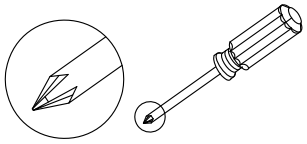

"+"Screw driver

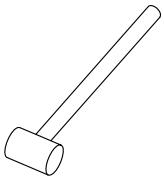

Rubber Mallet

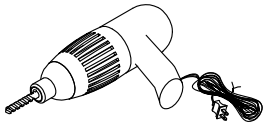

Electric drill

HARDWARE LIST

TILTING PREVENT HARDWARE 1 SET 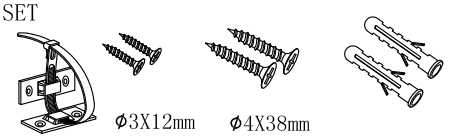 ϕ3X12mm ϕ4X38mm (1)	SHELF HOLDER 8 PCS (2)		

PARTS LIST

LINEN CABINET 1 PC  A	LEG 4 PCS  B	SHELF 2 PCS 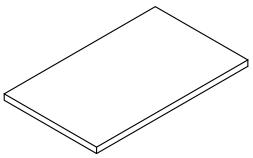 C

STEP 1: ASSEMBLE LEG (B)

• ROTATE LEG (B) ONTO BOTTOM PANEL TIGHTLY.

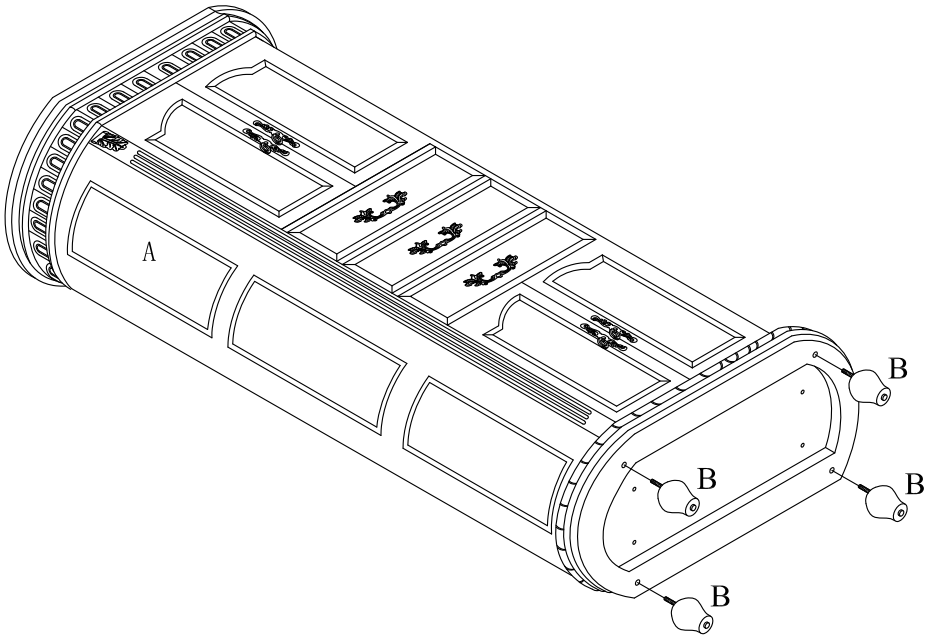

STEP 2: PLACE SHELF (C)

- INSERT SHELF HOLDERS (2) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL, THEN PUT SHELF (C) ON THEM.

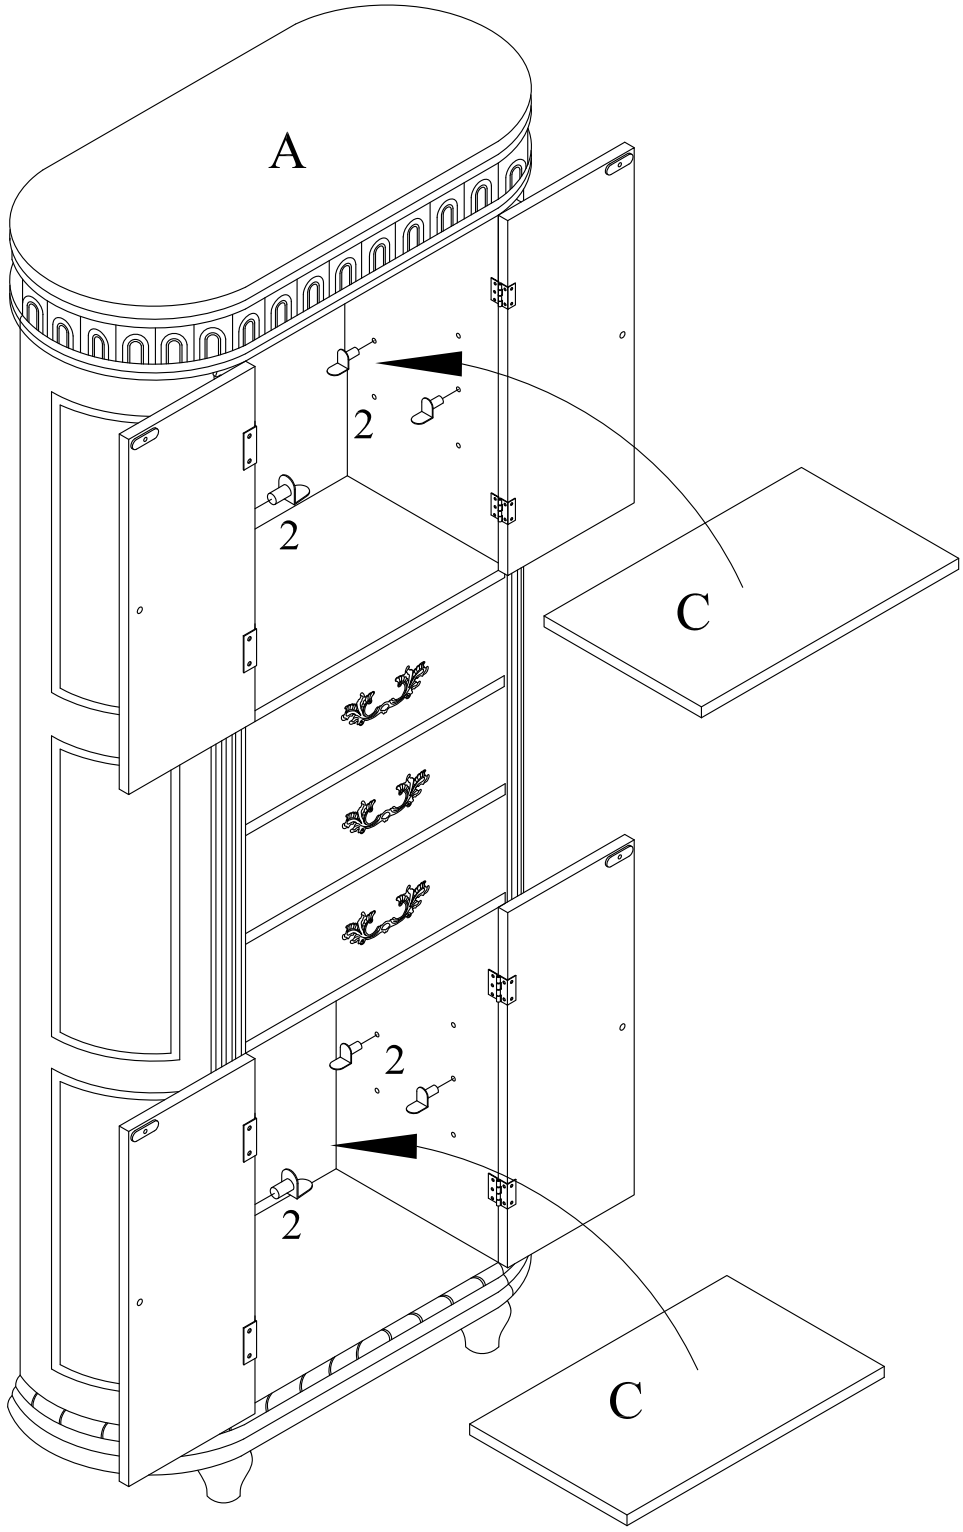

STEP 3: ASSEMBLE TILTING PREVENT DEVICE (1)

- USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 2 GECKOS INTO THE 2 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL. THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.

WARNING: THE TILTING PREVENT HARDWARE MUST BE USED AS A PART OF ASSEMBLY, OTHERWISE, TILTING DANGER MAY BE CAUSED.